

Queenax MWB 45 usage change

Issue


Using the Plyometric Platform or the Boxing Shelf on the corner mounted Mini Wall Bar 45's (MWB 45's) can cause the column to crack at the mounting point of the MWB.



Cracked column with a boxing shelf mounted on MWB 45's

Resolution

On all units, the Plyometric Platform and Boxing Shelf shall only be mounted on MWB 25's or MWB 35's. All new shipments will have the proper parts for this change. Refer to the most current renderings for placement. **In no case should these optionals be mounted on MWB 45's.**

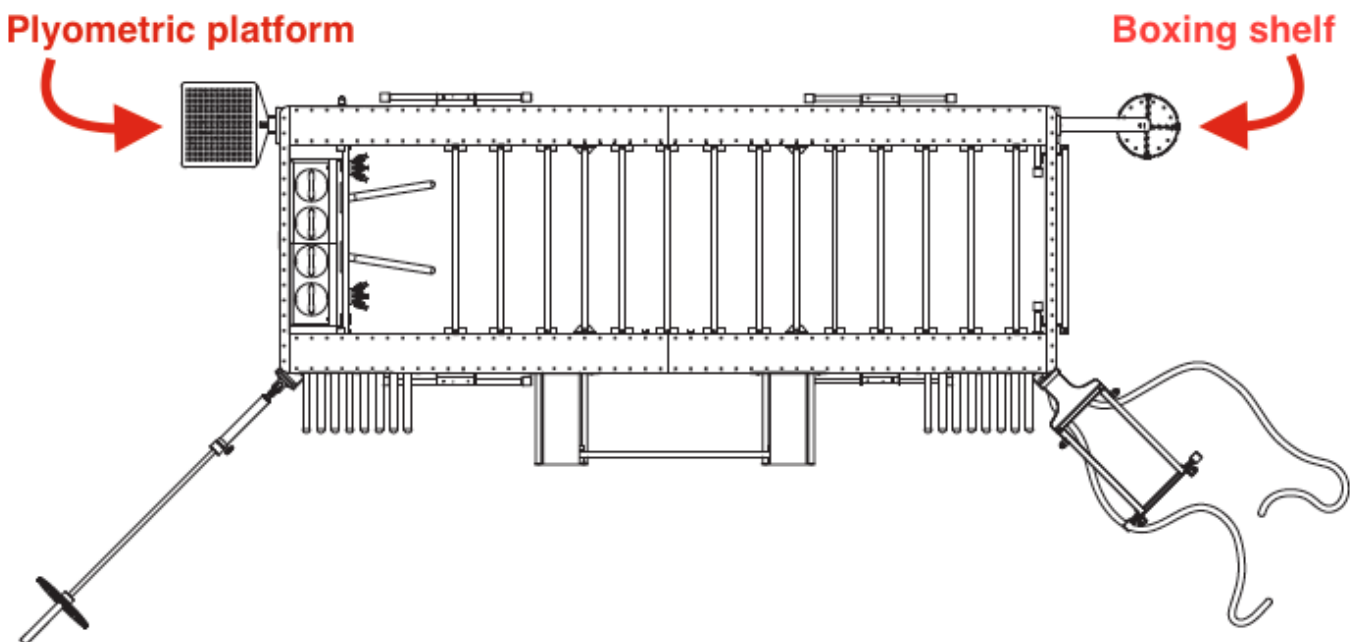

Plyometric platform and boxing shelf locations on an X2-500 Open Format